




### WARNING

#### PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION

- To prevent personal injury or product damage only licensed electricians should install.
- To avoid electric shock or component damage disconnect power before attempting installation or servicing.
- This product must be installed in accordance with the national electric code (NEC) and all applicable federal, state and local electric codes and safety standards.
- Disconnect product and allow cooling prior to servicing.
- Any alteration or modification of this product is expressly forbidden as it may cause serious personal injury, death, property damage and/or product malfunction.
- To prevent product malfunction and/or electrical shock this product must be properly grounded.
- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- The device is not intended for use with emergency exit.
- Suitable for wet location.
- Indoor use only.

### TRIM INSTALLATION:


#### 1 Hole Cutout Size

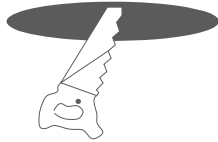


Round:  $\varnothing$  5.83"

Square:  $\varnothing$  6.22"


- #### 2 Remove the knockout on the junction box and attach Romex connector to junction box.

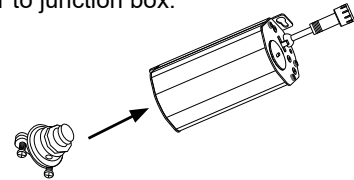


- #### 3 Open the drive door and connect supply wiring as shown below. Close cover.

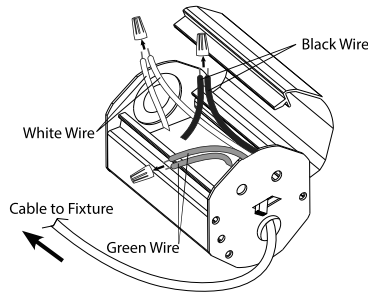


- #### 4 Select CCT by setting switch on the end of the driver to the desired setting.

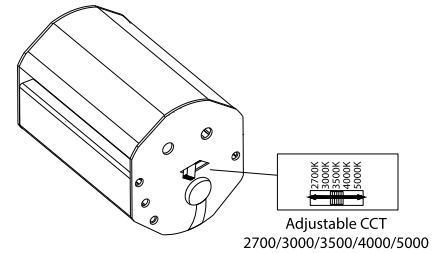


- #### 5 Insert driver into mounting hole, leaving fixture cable exposed.

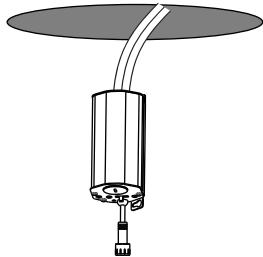


- #### 6 Twistlock the desired trim onto the light engine.

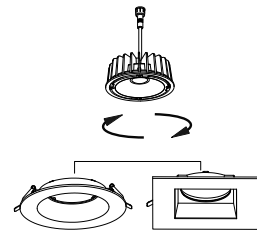

- #### 7 Connect light engine to driver by inserting and twisting the connectors.

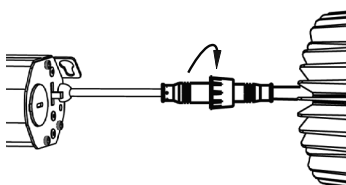

- #### 8 Insert the light engine into the ceiling by pressing the clips upwards. Insert the light engine into the mounting hold and release the clips.

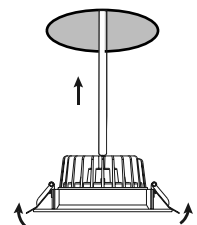

- #### 9 Turn power on and confirm fixture is working properly.